


# Provenance™ Woven Wood Shades

 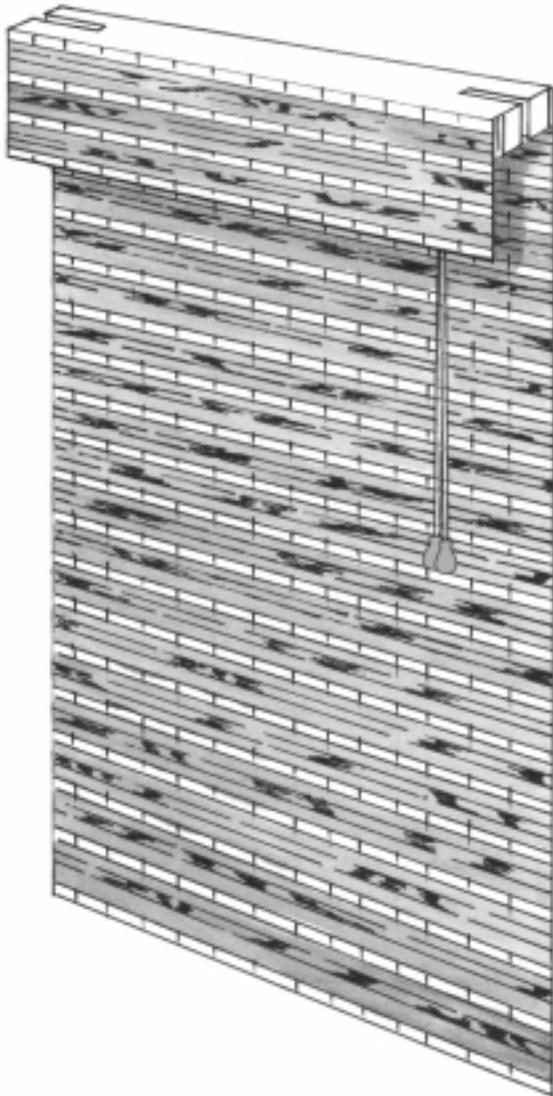


## Installation and Care Instructions

**HunterDouglas**  
*window fashions*


Thank you and congratulations on purchasing a Hunter Douglas Provenance™ woven wood shade. We know that you will be pleased with our product for years to come.

Installation for your new woven wood shade is simple. The only tools necessary are a screwdriver, pencil and a small hand drill.




### **BASIC INSTALLATION:**


Begin by unpacking your woven wood shade. Be careful not to discard the brackets packaged in the red hardware bag. Please use all brackets included. The number of brackets recommended are based on the width and weight of the shade.

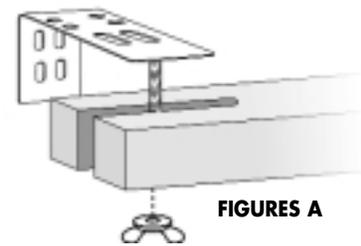


WIDTH	BRACKETS
18" to 36"	2
36 1/4" to 72"	3
72 1/4" to 96"	5
Two and Three on one Headrail	5

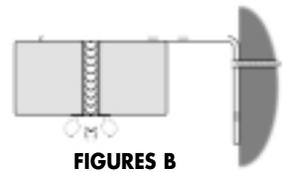

Shades may be mounted to the ceiling, wall or window frame (**FIGURES A-C**).

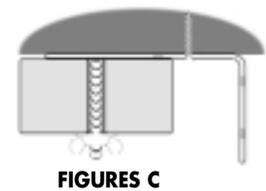


Place the bracket on the shade, putting the bolt through the slot in the top of the shade (**FIGURES A**). Mark the drill holes. Remove the brackets from the shade, place the brackets at the pencil marks and screw into place.

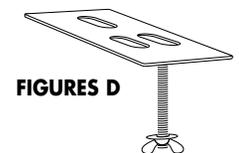

Fit the shade up into the bolt bracket so that the bolt is visible under the headrail. Place the wing nut on the bolt and tighten securely (**FIGURES A-C**).

A Speciality Ceiling Mount Bracket can be ordered separately (**FIGURE D**).

## SPECIALTY SHADES:

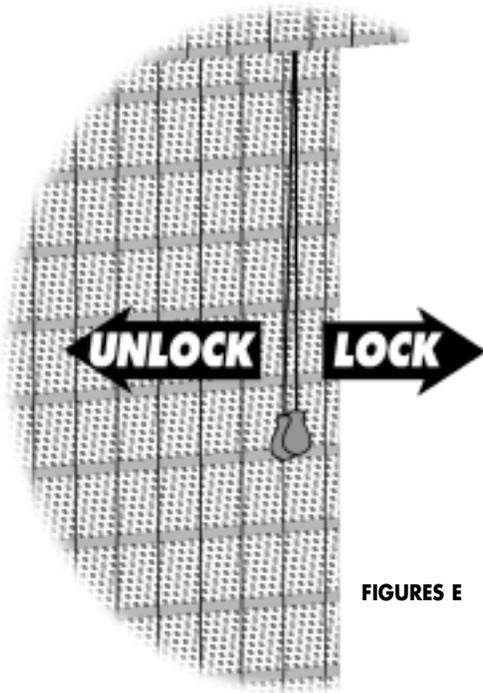

FIGURES E

### OPERATION OF SHADE:

To lock the shade in position, pull the cords to the right. To unlock, pull the cords to the left (FIGURES E).


To raise the shade, hold all cords, and pull until the shade is at the desired height. Do not try to raise the shade any higher than intended. When the shade is fully drawn, lock the cords into place.

If you experience any shade skewing, check to see that you are pulling ALL CORDS evenly. Pulling one cord will cause your shade to shift in one direction. If your shade should raise unevenly, gently pull on an individual cord until the bottom of the shade becomes level.

### CARE and CLEANING:

Should your Hunter Douglas Provenance™ woven wood shade become dusty or dirty, a lightly dampened cloth may be gently applied to the shade. It is not recommended that your shade be submerged into water.


### ANGLE TOP

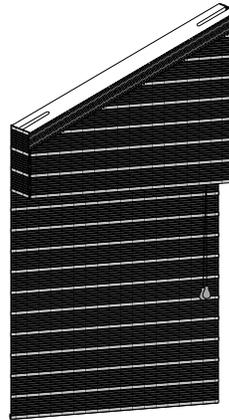

Shades are installed with the same hardware as standard shades.


### TOP-DOWN/BOTTOM-UP

Shades lower from the top and raise from the bottom. Be cautious during installation as top-down/bottom-up shades have an extra set of pull cords.

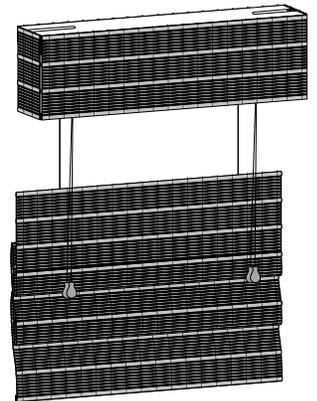


### MULTI-SHADES ON ONE HEADRAIL

Two and three shades on one headrail are mounted as any standard shade. Additional brackets are necessary to accommodate the weight.

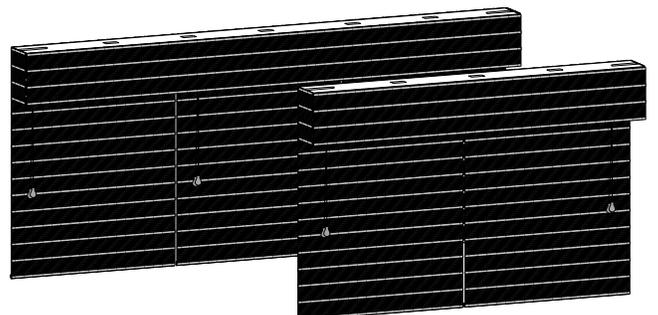


## UNIVERSAL CORD TENSIONER:

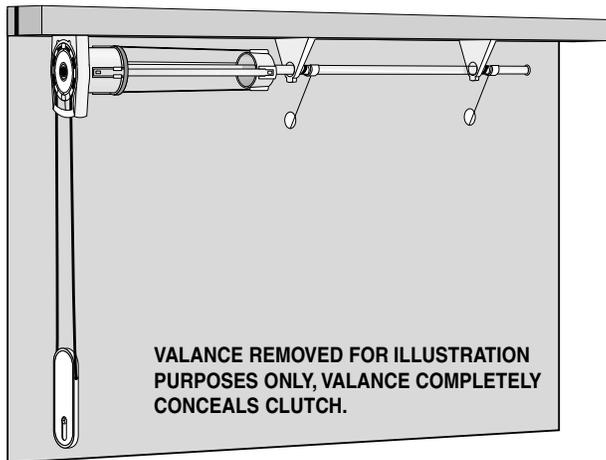

The Universal Cord Tensioner is the ideal safety solution for homes with children or pets. The Tensioner is mounted to the wall and holds the cord securely, eliminating choking hazards.

## OPACITY OPTION:

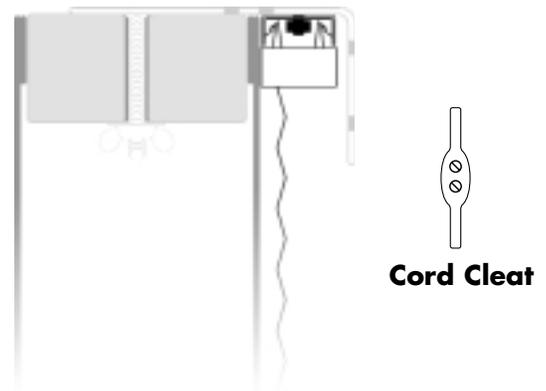

The Opacity Option mounts discreetly behind your new Provenance™ woven wood shade using our specialty Opacity Option bracket. Installation is very easy.

Follow the basic installation instructions for marking and drilling the holes for the brackets. Once the brackets are in place, snap your Opacity Option shade into the small clips located on the bracket.

*(Please note that your Opacity Option shade is facing the proper direction by checking the cord position.)*

Once the Opacity Option is properly installed, the woven wood shade is ready for installation. Fit the shade up into the bolt so that the bolt is visible under the headrail. Place the wing nut on the bolt and tighten securely.

A cord cleat must be used to tie off the Opacity Option cord. Please mount the cord cleat on the cord side of the window facing or the wall.

**HunterDouglas**  
window fashions

hunterdouglas.com  
Where Great Rooms Begin.

Hunter Douglas Designer Shades  
1924 Chespark Drive  
Gastonia, NC 28052  
1-888-243-0144